## 2016 Election Judges' Manual



Revised 2/16/16

# **Chapter 11**Opening the Scanning Unit

Overview	11.2
Required Supplies	11.2
Pre-Election Setup	11.2
Election Morning	11.5

#### **Overview**

Each precinct will receive at least one Scanning Unit. Larger precincts may receive more than one Scanning Unit.

Poll Watchers may observe opening procedures.

At least one voting judge must be stationed at the Scanning Unit at all times. Voting judges will be rotated in and out of this position by Chief Judges during the day.

#### **Required Supplies**

Scanning Unit keys

Scanning Unit Integrity Report - Opening

New tamper tape

Scissors to break security seals on the outside of the Scanning Unit

#### **Pre-Election Setup**

1. Remove the Scanning Unit from the Transfer Cart; to prevent injury and damage, this should be done by three election judges.



- 2. Roll the Scanning Unit to the location designated on the precinct layout diagram provided to the Chief Judges.
- 3. Engage both parking brakes on the Scanning Unit by gently stepping on the metal tabs. They will snap into place. **Caution: The metal tabs are sharp.**



4. Confirm that the shipping label on the back of the Scanning Unit shows the correct polling place. If it does not, immediately notify the local board of elections.



5. Use the flat key to unlock the back door of the Scanning Unit, unwrap the power cord (with the grey surge protector attached) and plug the cord into an electrical outlet. Leave the power cord compartment door open.



**IMPORTANT:** Keep the back door of the Scanning Unit open when the Scanning Unit is plugged into an electrical outlet. Failure to do so may result in the unit overheating.

6. Ensure that both lights on the surge protector (red and green) are lit.



ASTOP; do not open the unit Tuesday morning.

## **Election Morning**

1. **Verify** the security seals on each unit using the *Scanning Unit Integrity Report – Opening*.

County:	Montgomery			_					Da	te: A	oril 2	6. 20	016	,	
District/Pre	cinct:														
					ed configuration nfiguration repo										
					ampertape or se moved tamperta				rto clos	sing the	polls	on t	he " <b>Tam</b>	per	
COMPLE	TE ALL GREY	AR			C.					_					
	Scanning Unit		Scanning Unit T		С.	.		D.		E.			F.		
Scanning					Rear Access Door Tamper Tape # (Do Not Remove)		Front Access Door Tamper Tape # (Do Not Remove)		Main Ballot Box Seal #			New Main Ballot Box Seal #			
Unit #	Verify	٧	Verify	<b>V</b>	Verify	٧	Verify √		Verify √			Record			
1															
2															
Scanning Unit	G. Emergency B Compartme Seal #		New Emerg Ballot Comp Seal #	artmen		I.  Left Case Seal # (Do Not Remove)						L. Protected			
#	Verify	<b>V</b>	Record		Verify	Verify √		Verify √		Verify		V	Verify	V	
1															
2															
					this report is tr			e.							

2. Verify the Scanning Unit Lid seal in Column A. Remove the seal.



3. Remove the security seal. Use the flat Scanning Unit key to unlock the lid.




4. Unhook the lid latches. Pull both latches out and flip up. Do not force the lid up. Instead, hold onto the latches as you nudge the lid upward. The hydraulic arms will do the lifting.



5. Verify the serial number on the top of the Scanning Unit (column **B** of the Scanning Unit Integrity Report - Opening).



Verify the tamper tape number on the rear access door (column C of the Scanning Unit Integrity Report – Opening). Do NOT remove the tamper tape.

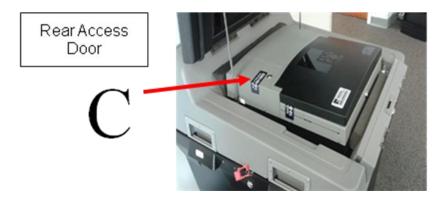


7. Use the round key to unlock and open the Ballot Scanner.



8. Gently lift and raise the screen to the upright position. The Ballot Scanner will turn on by itself. If the Ballot Scanner does not turn on, alert a chief judge.



9. **Verify** the tamper tape number on the front access door (column **D** of the *Scanning Unit Integrity Report – Opening*). **Do NOT remove the tamper tape**.

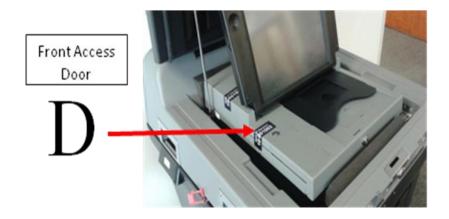

Note: If the scanner does not turn on or if you hear a series of four beeps check the power supply to the Scanning Unit. Make sure power cord is connected firmly in the back of the Scanning Unit and also into the grey surge protector and power outlet. Make sure the power outlet is "live" (i.e., power is coming through the outlet). If the Ballot Scanner still does not turn on alert a chief judge.



10. **Verify** the number on the security seal on the Main Ballot Box (column **E** of the *Scanning Unit Integrity Report – Opening*).



11. **Remove** the security seal on the Main Ballot Box and place it in the Chief Judges' Red Folder. Use the flat Scanning Unit key to unlock and open the Main Ballot Box door.

12. Look inside the Main Ballot Box to verify that it is empty. If there are any ballots inside the Main Ballot Box, alert a chief judge.



13. Roll an empty Ballot Transfer Bin from the Equipment Transfer Cart to the Scanning Unit area.



14. Place an empty Ballot Transfer Bin inside the Main Ballot Box. Ensure that both lids of the Ballot Transfer Bin are open and resting on the sides inside the Main Ballot Box and the strap handle is facing out.





15. Close, lock, and reseal the Main Ballot Box door. **Record** the new seal number in column **F** of the *Scanning Unit Integrity Report - Opening*.



16. **Verify** the number on the security seal on the Emergency Ballot Compartment door (column **G** of the *Scanning Unit Integrity Report – Opening*). Remove the security seal.



17. Unlock and open the Emergency Ballot Compartment door. Make sure that the compartment is empty. **Beware of sharp edges.**Alert a chief judge if any ballots are found inside the Emergency Ballot Compartment.



18. Ensure that the metal flap on the Emergency Ballot Compartment door is raised.



19. Close, lock and reseal the Emergency Ballot Compartment door. **Record** the new security seal number in column **H** of the *Scanning Unit Integrity Report - Opening.* 



20. **Verify** the left and right side case seals are intact (columns **I** and **J** of the *Scanning Unit Integrity Report – Opening*). **DO NOT** remove the seals.




21. Once the Ballot Scanner turns on, **verify** the Public Count number is the same as indicated in column **K** of the *Scanning Unit Integrity Report – Opening.* Also **verify** the Protected Count number is the same as indicated in column **L**.




22. A chief judge enters the Election Code (found in the Chief Judges' Red Folder), then touches "**Accept.**"



NOTE: The Ballot Scanner performs an internal self-test. This process may take several minutes. If the following screen appears, or if the Ballot Scanner automatically shuts down, alert a chief judge immediately. Never turn off the Ballot Scanner or unplug the Scanning Unit unless instructed by a Chief Judge.

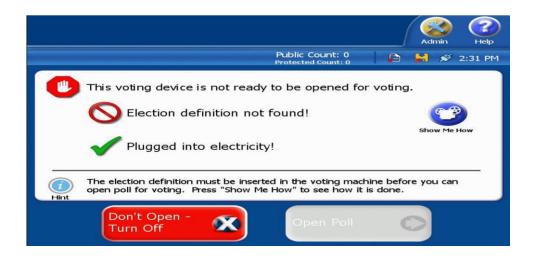


23. **Confirm** that the polling place name displayed on the screen is correct and the unit is receiving power. Touch "**Open Poll**" on the screen.

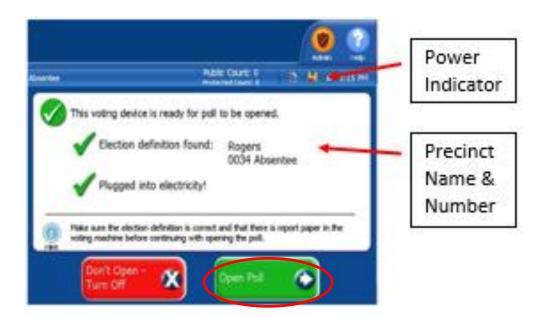

24. A Configuration Report will automatically print followed by two copies of the "Zero Report." Separate the Zero Reports into two individual reports:



- A. Both chief judges sign both Zero Reports;
- B. Attach the **first** copy of the Zero Report (with the Configuration Report still attached) to the *Scanning Unit Integrity Report Opening*;
- C. Place the **second** Zero Report in the Black Memory Stick Security bag;
- 25. Print a **third** Zero Report to post for the public:
  - A. Press "Report Options" and on the next screen in the "Report Type" box, press "Ballot Accounting Status Report";
  - B. Press "Print Report" and the report will print. Do not sign this report.
  - C. Post the report for public viewing.
- 26. Once the self-test is completed, the following screen appears. Touch "Go To Voting Mode."

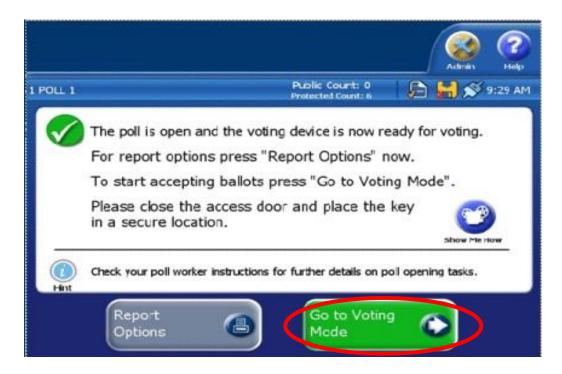

27. When the Ballot Scanner is ready to receive ballots. The following screen appears.

